



# MINI COOPER ECU REMOVAL

2008-12 MINI Cooper (All)

**NOTE:**

Prior removing ECU, be sure to turn off car completely. No need to disconnect battery. After reinstalling ECU, turn the ignition ON and wait 30 sec before starting the engine.

TOOLS REQUIRED: [1] Small Screwdriver [1] 10mm Nut Driver or Socket



 
1. ECU location.



2. Undo 10mm Hex screw securing ECU cover.



3. Use screwdriver to release the (4) locking tabs.

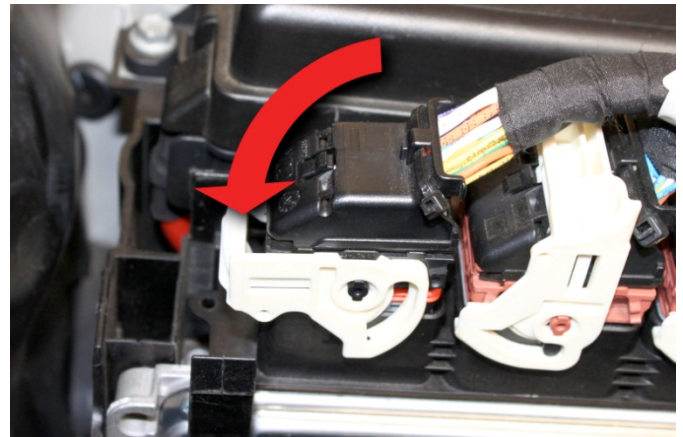

4. Push in locking tab on electrical connector, then rotate latch 90° down to unlock. Do the same for the other (2) connectors.



5. Just below the bottom of the ECU cast housing there is a plastic locking tab on each side. Push this tab toward the driver's side of vehicle and pull up ECU to unlock. Do same to other side. Now pull up ECU from mount.

6. Reverse steps for reinstalling ECU.

©2012 NM Engineering, a division of Automotive Performance Systems, Inc.  
All rights reserved. Reproduction in whole or in part is prohibited.  
DOC. NM.ECU.REMOVAL Rev. 06.10.12