



# K&N AIR FILTER CLEANING INSTRUCTIONS

Most K&N Air Filters will normally require cleaning every 50,000 miles.  
Servicing your K&N Air Filter is simple; just follow the 4 easy steps below.

## STEP 1: APPLY CLEANER

Liberal spray K&N Air Filter Cleaner or K&N Power Kleen™ onto both sides of filter and allow to soak for 10 minutes to loosen the dirt. Do not allow cleaner to dry on air filter.



## STEP 2: RINSE FILTER

Rinse off air filter with cool low-pressure water from the clean side out in order to flush the dirt out of the filter. Continue to rinse the filter until all traces of cleaner are gone. It may be necessary to repeat steps 1 and 2.



## STEP 3: DRY FILTER

After rinsing, gently shake off excess water and allow filter to dry naturally. Do not oil until the filter is dry.

## STEP 4: OIL FILTER

**SQUEEZE OIL (99-5050):** Apply K&N Air Filter Oil evenly along the crown of each filter pleat. Allow oil to wick for approximately 20 minutes. Touch up any light areas on either side of the filter until there is a uniform red color on all areas.



**AEROSOL OIL (99-5000):** Spray K&N Air Filter Oil evenly along the crown of each filter pleat holding nozzle about 3" away. Allow oil to wick for approximately 20 minutes. Touch up any light areas on either side of the filter until there is a uniform red color on all areas.



The above process is the only approved procedure for maintaining your K&N Air Filter.

Visit [knfilters.com](http://knfilters.com)® for additional information on cleaning and re-oiling your filter and examples of a dirty filter needing to be serviced.