




Classic Interior Trim Fittings

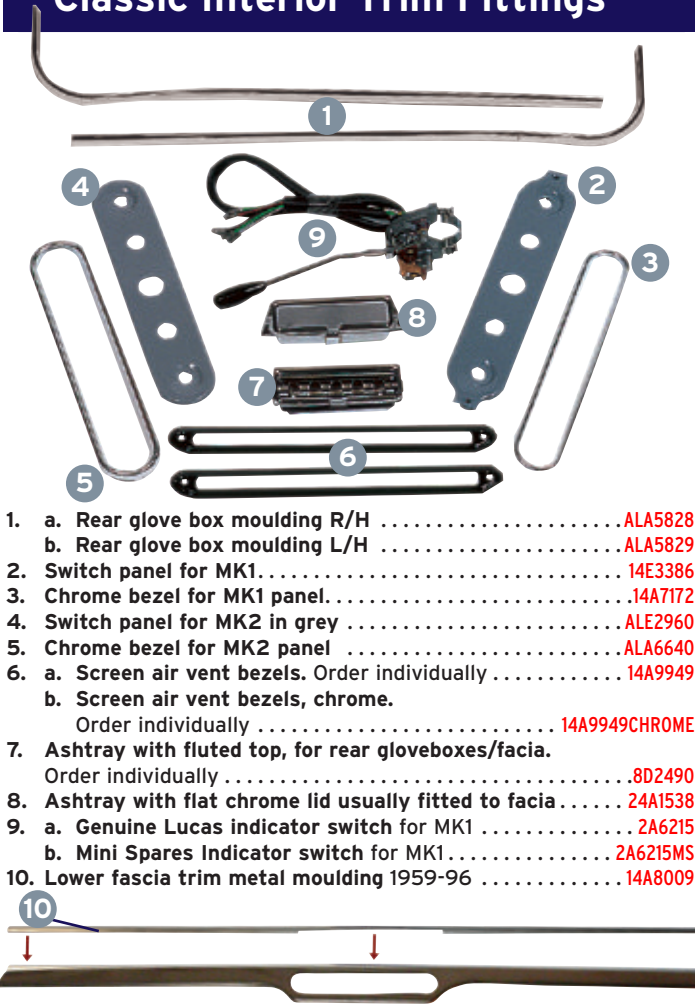

1. a. Rear glove box moulding R/H **ALA5828**
b. Rear glove box moulding L/H **ALA5829**
2. Switch panel for MK1..... **14E3386**
3. Chrome bezel for MK1 panel..... **14A7172**
4. Switch panel for MK2 in grey **ALE2960**
5. Chrome bezel for MK2 panel **ALA6640**
6. a. Screen air vent bezels. Order individually **14A9949**
b. Screen air vent bezels, chrome.
Order individually **14A9949CHROME**
7. Ashtray with fluted top, for rear gloveboxes/facia.
Order individually **8D2490**
8. Ashtray with flat chrome lid usually fitted to facia **24A1538**
9. a. Genuine Lucas indicator switch for MK1 **2A6215**
b. Mini Spares Indicator switch for MK1..... **2A6215MS**
10. Lower fascia trim metal moulding 1959-96 **14A8009**

MK3 Door Handles



17. Ten piece chrome on alloy door set including G281 bezels as above and a set of chrome latch plates. Car set **MSA507**
18. Complete car set of 6 handles in polished alloy. (includes 19, 20 and 21) **MSA1129**
19. Polished alloy window winder handle. Order pair **MSA1130**
20. Polished alloy door open handle. Order pair **MSA1131**
21. Polished alloy door pull/grab handle. Order pair **MSA1132**
22. Winder handle bezel in chrome plastic to replace OE black type. Order individually **G281**
23. Door lock plate escutcheon pair, chrome on plastic **SP226**
24. Door lock plate surround bezel in stainless steel (shown on plastic escutcheon - not supplied) - pair **MSA1133**
25. a. Original Mini plastic winder handle. Order individually **CZA7109**
b. Flanged screw for winder handle..... **ZKC3317**
26. Spring loaded knob - alternative winder handle fitted as a safety spec from 1982 on approx. Fits all Minis. Order individually **YXX3199PA**
27. Special size screw for fitting above. Order individually. **ADU8081**
28. Finishing plug - grey only. Order individually **YXX3200LNF**
29. Mini interior plastic door opening handle as fitted to models up to 1997. Order individually **JPC8387PA**


MK3 Door Fittings

MK3 Interior Door Hinges

Wind up window doors 1970 on.



11. a. Top right hand hinge. Genuine Order individually **CZH202**
Non genuine.
Order individually **CZH202MS**
b. Top left hand hinge. Genuine.
Order individually **CZH203**
Non genuine.
Order individually **CZH203MS**
c. Bottom door hinge either side. Genuine. Order individually. **CZH212**
Non genuine.
Order individually **CZH212MS**
e. Complete car, door 4 Hinge kit, (Money saver).
Genuine **MSSK017**
Non genuine..... **MSSK017B**
12. Door stay for MK3 saloons 1970 on. Order individually..... **ADA5671**
13. Door stay grommet.
a Right Hand **CZH4052**
b Left hand..... **CZH4053**
14. Door stay seal 1986 on.
a. R/H. Order individually **CGE10038**
b. L/H. Order individually **CGE10039**
15. Clevis pin for door stay.
Order individually **CLZ412**
16. For door hinges you might need these shims to align your doors correctly or use as a template.
Order individually **ALA6381**

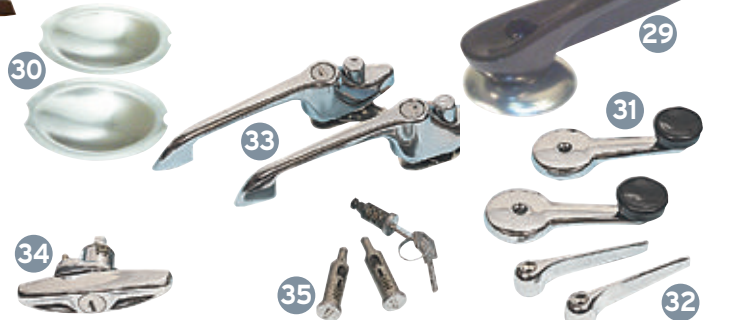

30. Door scoops - to stop those unsightly scratches made by finger nails, rings etc. These are made only for wind up window type doors and fit in the dish behind the door handle. Simply loosen off the exterior door handle and slide them in place. Sold in pairs. Stainless steel scoops **8B12500**
31. Chrome plated metal window winder handle.
Order individually **G282**
32. a. Chrome plated metal door opening handle. Can be fitted as it is or pull the old chrome escutcheon off your original plastic handle and push on back of chrome type, to cover the door liner hole. Order individually **G283**
b. Long screw with small head needed on late cars **CMZ312**
33. Outer chrome door handles from 1970 on are available separately or as a 3 piece kit, including the boot handle. They have matched barrels and key numbers.
a. Complete 3 piece kit **CZH1785**
b. R/H door handle and key **CZH886**
c. L/H door handle and key..... **CZH887**
d. Fixing screw needed for later models..... **CZH887**
34. Rear boot handle, from 1970, with barrel and key..... **JRC2844**
35. a. Lock barrels. When any of your barrels wear or have different numbers, why not replace both door and boot barrels with a matching set of 3 **BARRELSET**
b. Replacement retaining clip for barrels..... **PR109**

