

MINI and BMW Shift Knob (new)

Installation Guide | Ver 0.9



MINI Shift Knob

Installation Guide

Overview

Thank you for purchasing the MINI and BMW Shift Knob from CravenSpeed. The piece is made from the highest grade materials and is guaranteed to be free from defects.

Tools Required are:

1. 2mm Allen Key

Procedure.

1. Remove OEM knob (PULL UP!)

To remove the OEM Shift knob you need to pull really hard. Harder than you think and then some.



Watch out, when it comes free you can break a hand on the roof!




(Graphic by the talented Emily Martin)

2. Place Shit Knob Core over Shifter, slide down.



3. Place Knob Adapter over shifter. You'll notice a small collar on one end of the adapter, that collar will be facing DOWN, when you slide it over the shifter, it will click into the indented section (Seen below).

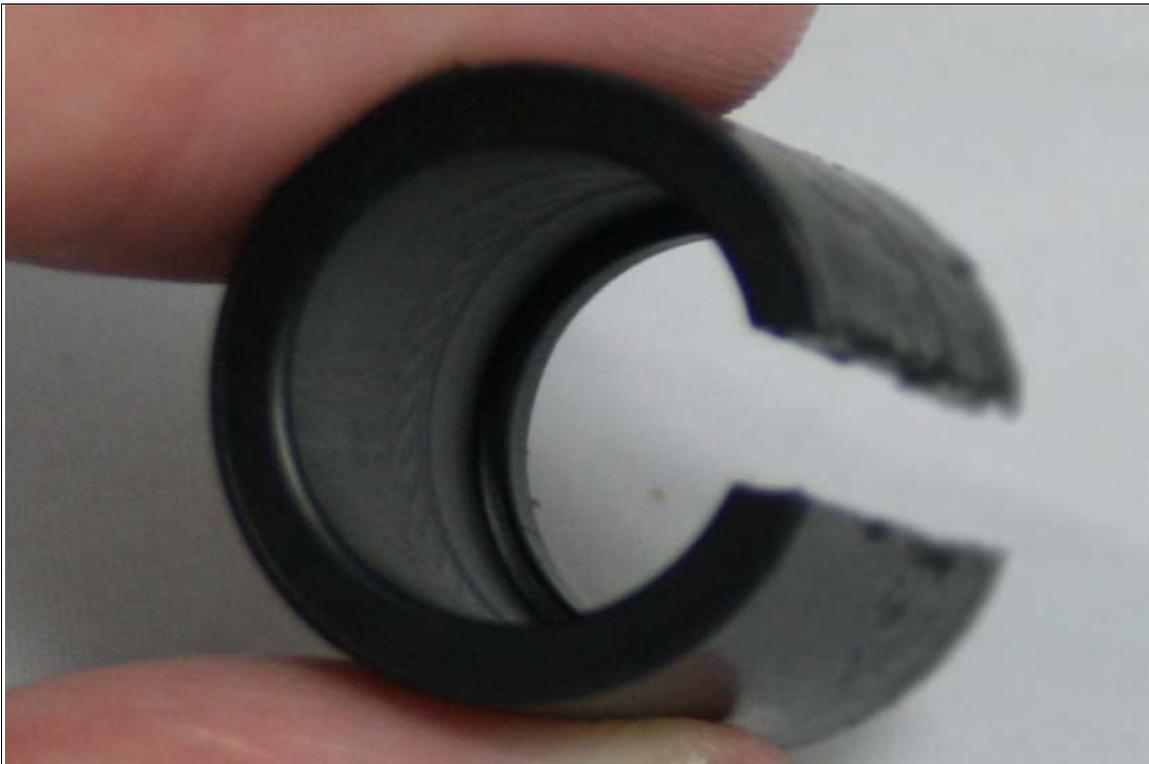



4. Slide Knob Core UP, but not off shifter, around knob core.



5. Place Shift Knob over the core.



6. Make sure the holes in the knob, and core line up (You can grab the bottom of the core, and spin it)



7. Place cap on your new knob, and install the 6 (2mm Hex) screws.





If you have any questions about this installation, please give us a call at (503)505-6886 from Monday - Friday between 8am and 4:30pm Pacific Time and we will be glad to give you a hand.